



Outdoor/External Re-Entry Keypad Programming

All programming must be done once entered into programming mode. This can be done by pressing **99 # 567**. Yellow LED starts to blink once in programming mode.

<u>Function</u>	<u>Options</u>	<u>Factory Default</u>
Primary Reset Code	<u>any 3 digits preceded by *</u>	*234

To change code from ***234** to new code ___ (EX. ***842**) enter **99 # 567** (yellow LED starts to blink), then enter **2 # 842 * 842 ***. To exit programming enter ***** (the red LED should be light).

Now enter new code *** ___** (EX. **842**) green LED should light responding to new code.